

POWER PLUS SPARKING ENHANCEMENT

Installation Instruction

Step1:Power Off Engine

Step2:Open UP Engine HOOD, Find Out Ignition Coils;


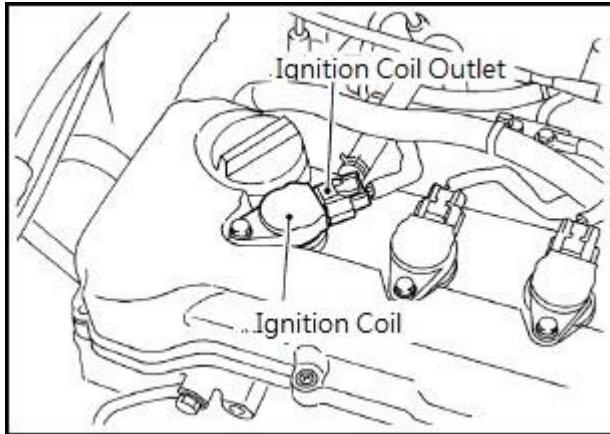


Figure1: Caution Engine Bay Is Extremely Hot After Running

Step3:Unplug Ignition Coil(Figure1),Then Find Out Circuit Positive Electronic Wire.(Confirmation by power meter with DC20V setting)

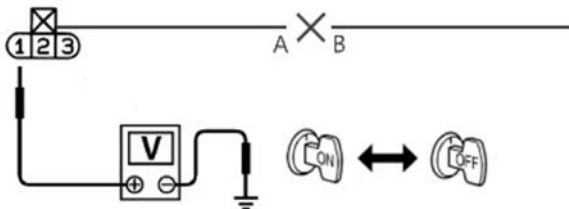

(Figure2)

Step4: Cut Ignition Coil Circuit And Make Positive Electronic Wire To A and B Portion. A (Ignition coil side) B power switch side

Step5: Mount POWER PLUS Box In Solid Place In Engine Bay Then Connect Green Wire To A, White Wire To B. Hook Up O Ring On Black Wire Then Screw On Negative Pole Of Battery.

Step6: Organize Wires And Plug On Ignition Coil Solidly, Then Turn On Power (Key on ; ACC on). Power PLUS Will Be On With Flash Light.

(Appendix 1, if there are more than one Ignition coil, all positive line side A must be connect in parallel, only one pin B need to be connected, use Insulation Tape on rest side B.)

※ Product Size: 11.5x8.1x5.9CM(length x width x high,CM)

Trouble Shooting

Scenario	Status	Exclusion
Engine is started the host did not lightning lit	Engine running properly	Failure
	Engine not working	Check Fuse

Warranty / Service:

One year warranty and exchange new one in 7 days (DOA 7 days)

For any reason return , buyer should keep goods ,accessories and all packaging in good condition. And afford shipping charge of return.

For any support issue, please contact dealer or visit us at

<http://www.snaze.com/>