


# POWER PLUS, Install now and effective now!

## Installation instruction:

1. Open the cover of Engine, find out the battery location.
2. Figure out poles of the battery, normally there would be a red button-top on the Positive pole.
3. Connect Power plus blue-wire to any available screw in the engine . (Figure 1)
4. Screw Power plus black wire with circularity slice onto battery negative pole. (Figure 2)
5. Screw Power plus Red wire with circularity slice onto battery positive pole.(Figure 3)
- 6.

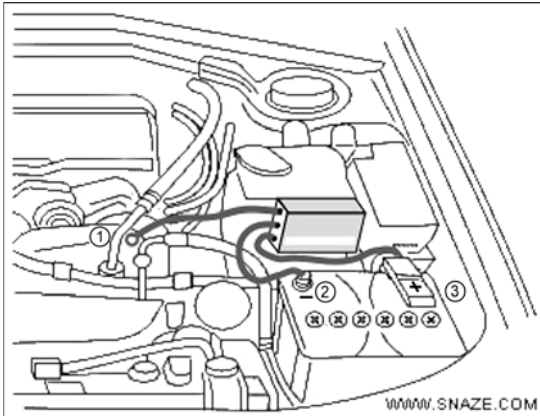

7. Power indicator will blink for 3 seconds, and then display battery voltage on LCD panel. ( Average between 12V-13V)
8. Use the twin adhesive to mount the Power plus on the Battery body or any flat of Engine bay. (Tips, use solvent to clean target surface before stick on)
9. Start Engine, and enjoy the performance of power plus (Now the Power plus voltage should be display on 13V~15V).

※ Dimension: L 11.5 W 8.1 H 5.9 CM

## Trouble shooting

Symptom	Cause	Solution
Power indicator does not blink(should be blink for 3 seconds) after all wire connected	Wrong electric pole configuration	Swap the Black and Red wire connection
	Screw loose	Screw on
LED panel displays LO	Low voltage or battery failure	Recharge battery or replace with new one
LED panel displays HI	Over voltage	Please ensure the battery specification, over voltage may caused electric equipment damaged.
Voltage under 13V when engine on	Generator failure	Maintenance required
LED panel displays HI when engine on	Generator failure	Maintenance required

## Warranty and after service:

**One year warranty and exchange new one in 7 days (DOA 7 days)**

**For any reason return, buyer should keep goods, accessories and all packaging in good condition. And afford shipping charge of return.**

**For any supporting issue, please contact distributor or visit our website <http://www.snaze.com> .**