


Installation Instruction

1. Warm up engine to operation temperature then turn off engine.
2. Find out OBDII (On Board Diagnostic II) connector, and then plug on Zero EcoPower at ACC off status.

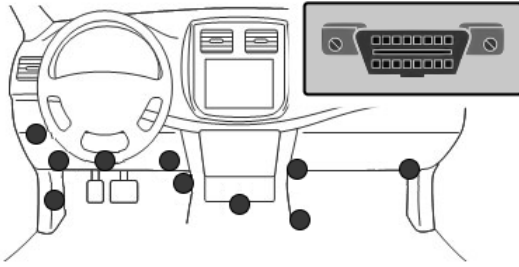

3. Start Engine, then press reset bottom after 10 second. PWR, LNK, and ECU LED indicator will run self-test. LNK indicator will be constantly on after negotiation.
4. Takes around 3 minute for system negotiation, PWR and ECU LED indicator will be on steady while system is ready. And LNK indicator may blink sometimes for data validation.
5. You will feel slightly different at first run, and system will be optimized after 100KM run in.
6. If you need to uninstall Zero EcoPower, you must do it at ACC off status.
7. Follow the installation instruction strictly. 1 - 3

Function Description

Reset Reset to default setup and negotiate with ECU.

Switch Full Auto mode at all switch on.

For manual setting, please refer PWM VPW ISO KWP and CAN information in Snaze web site.

PWR Power indicator.

LNK ECU negotiation indicator.

ECU ECU connection indicator

※ CM Dimension, L8.0 xW4.5 xH1.5

Warranty/After Service

One year warranty and, 7 days renewal warranty service.

Customer should keep all accesses in a complete package and freight burden for product return.

■ For any support issue, please contact reseller or visit www.snaze.com

Serial Number on product

Purchasing Date
